

<u>교</u>

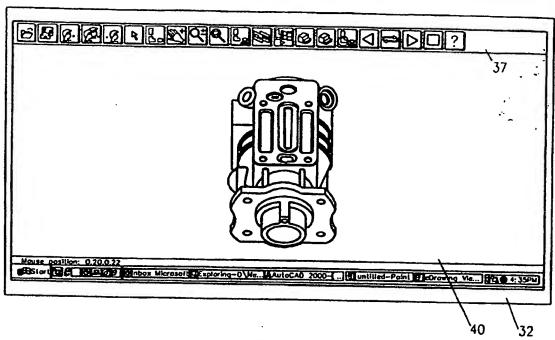


FIG. 2

3/29 32 🖪 eDrowing Viewer - Pump2.eDw File View Help 3D Pointer 1. ALL BUSSES TO HAVE A 6' DRAFT 2. ALL HOLES LABELED "TIC HOLE 6" HAVE A COMPOUND ANGLE 3. SEE 100-2032-000 FOR OTHER CASTING DIMENSIONS 37 SECTION A-A How do I create an eDrawing? Mouse position: 9.16,21,99 BStart P C P D D D Now Microsoft C Exploring - D Ne... A AutoCAD 2000 - [...] eDr

FIG. 3

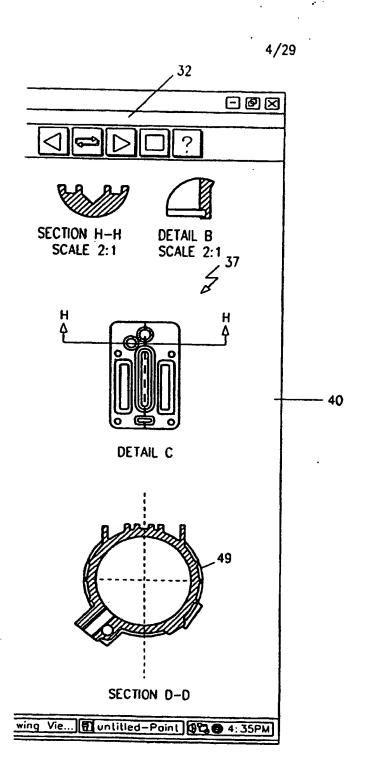


FIG. 4



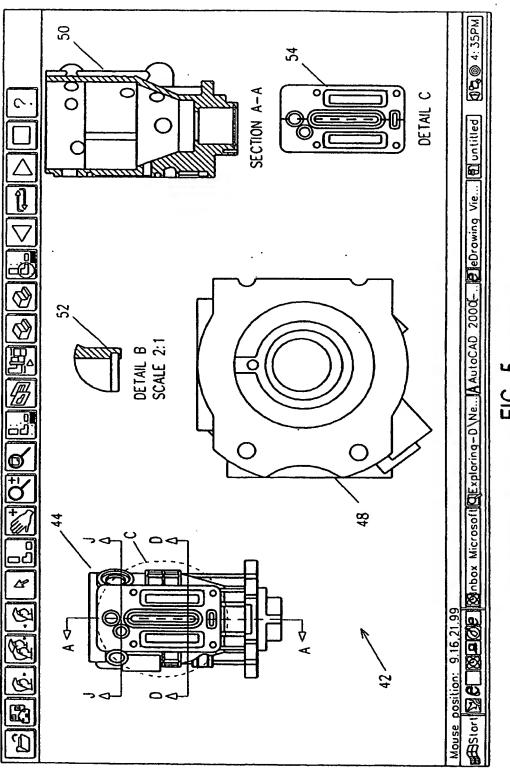



FIG. 5

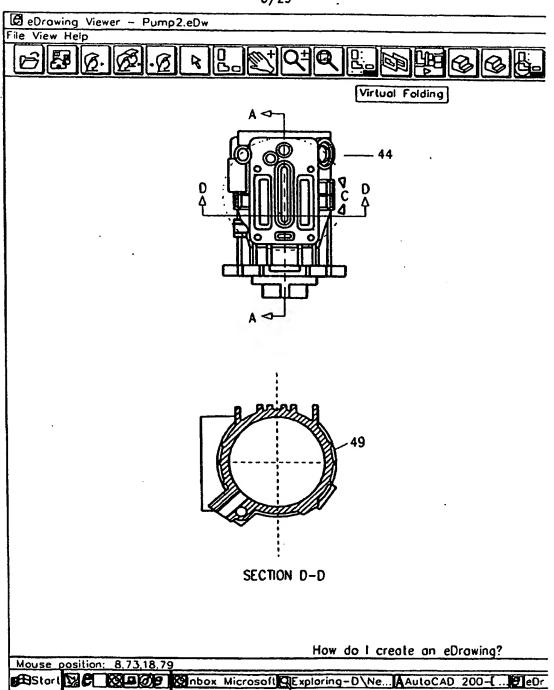

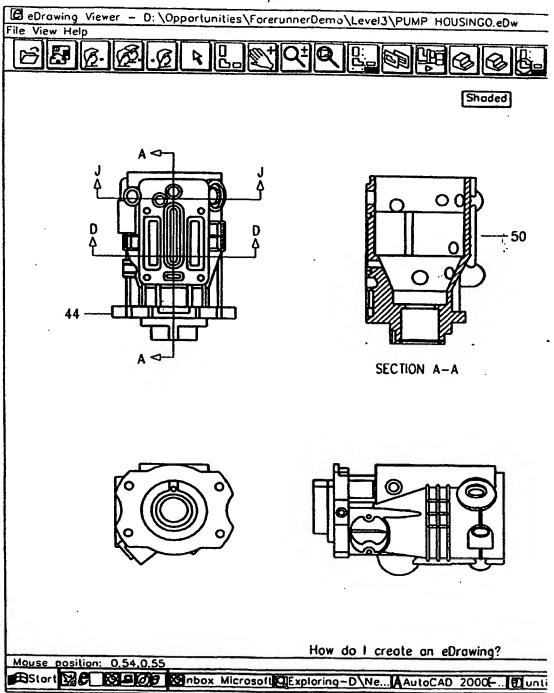



8/29 32 @ eDrowing Viewer - Pump2.eDw File View Help 30 Pointer 1. ALL BUSSES TO HAVE A 6' DRAFT
2. ALL HOLES LABELED "TIC HOLE 6" HAVE A COMPOUND ANGLE 3. SEE 100-2032-000 FOR OTHER CASTING DIMENSIONS 56 60 55 SECTION A-A 1 58 62 How do I create an eDrawing? Mouse position: 9.16,21,99 EStart DE COMPOS Microsoft Replacing - D\Ne... A AutoCAD 200-(... 9 eDr

FIG. 8

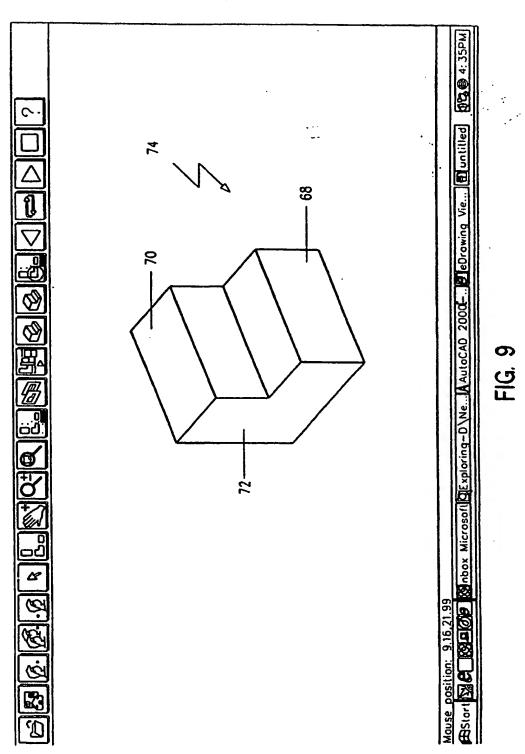


10/29

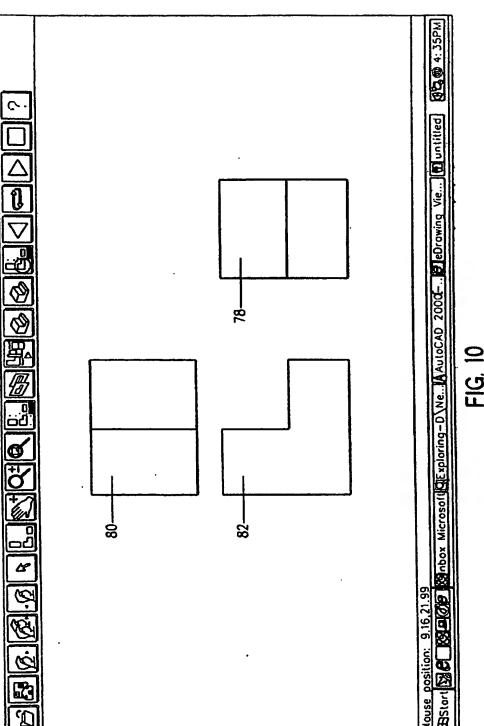

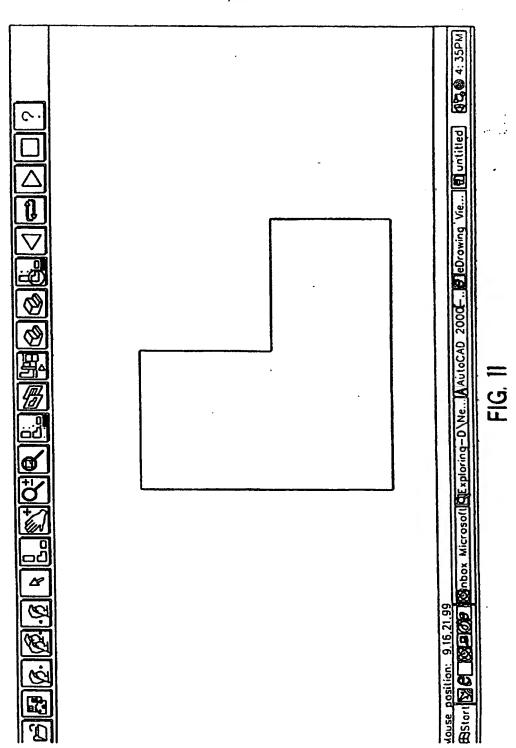

12/29

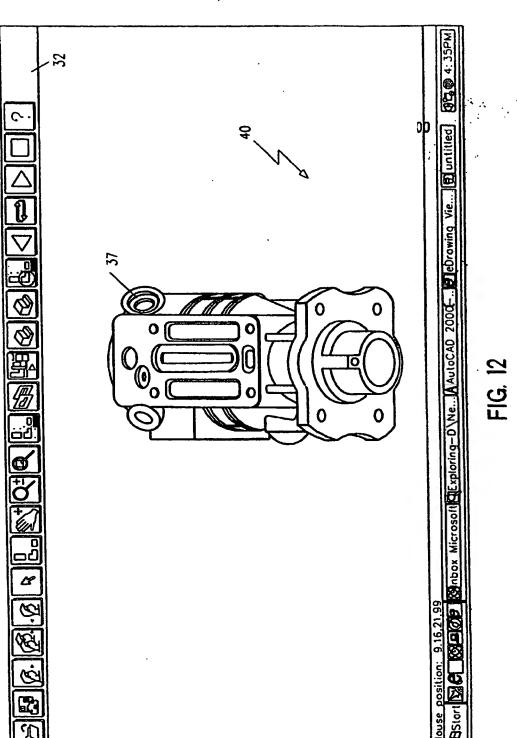

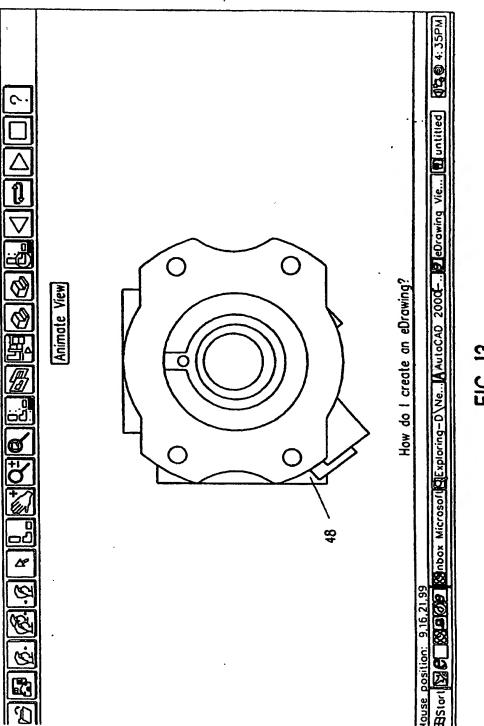


FIG. 13

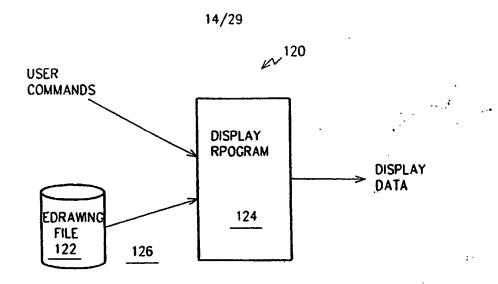


FIG. 14

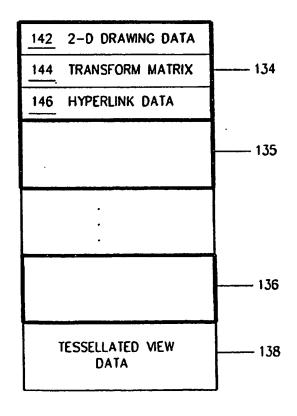


FIG. 15

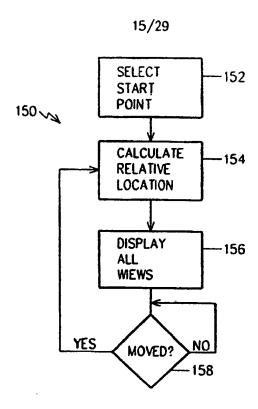


FIG. 16

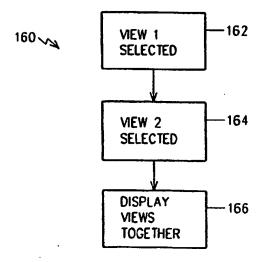


FIG. 17

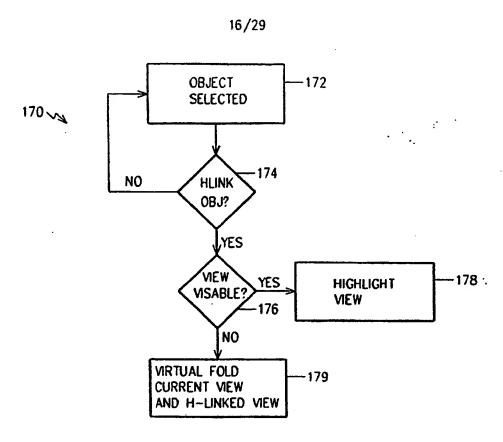


FIG. 18

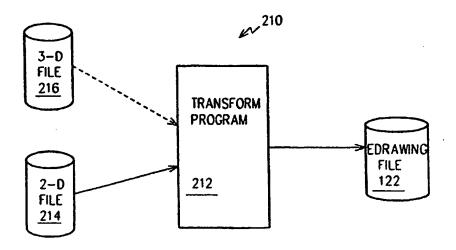


FIG. 20

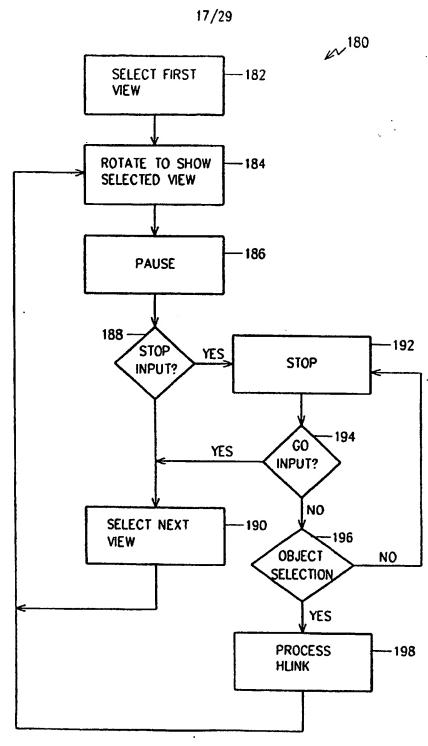


FIG. 19




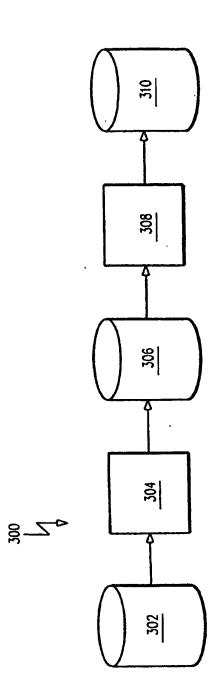


FIG. 2

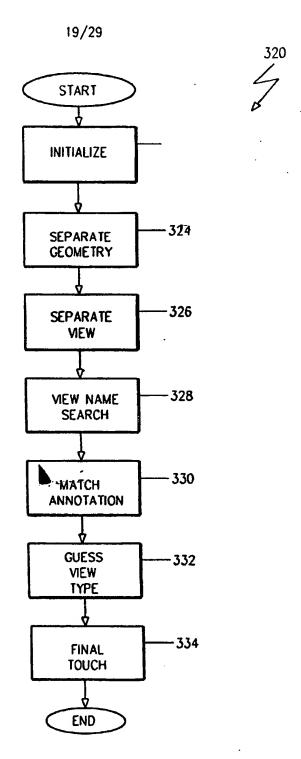

•

FIG. 22

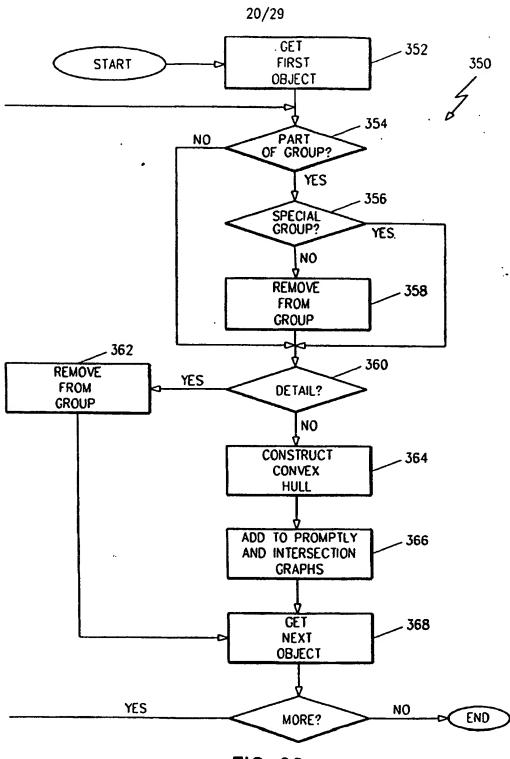


FIG. 23

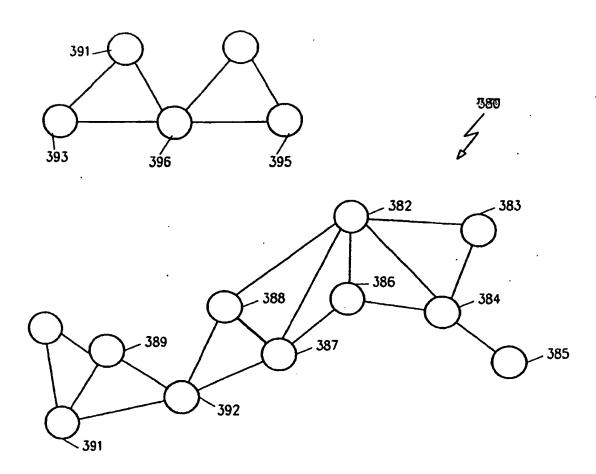


FIG. 24

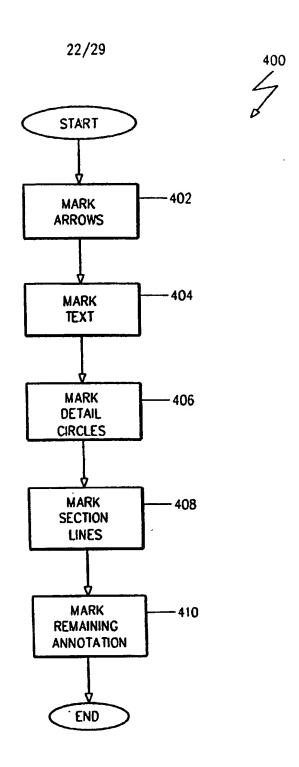
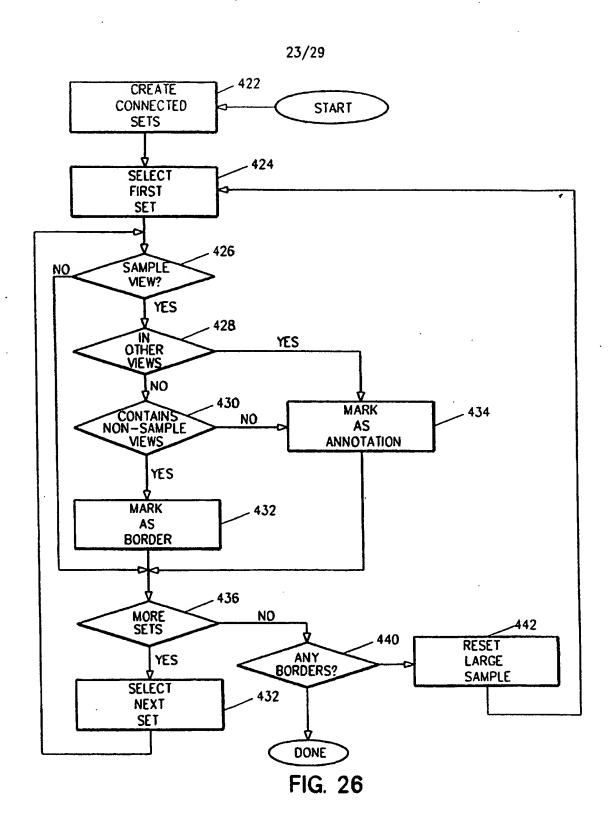


FIG. 25



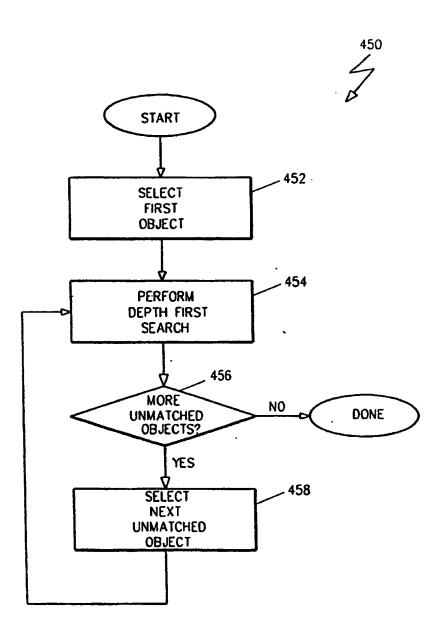
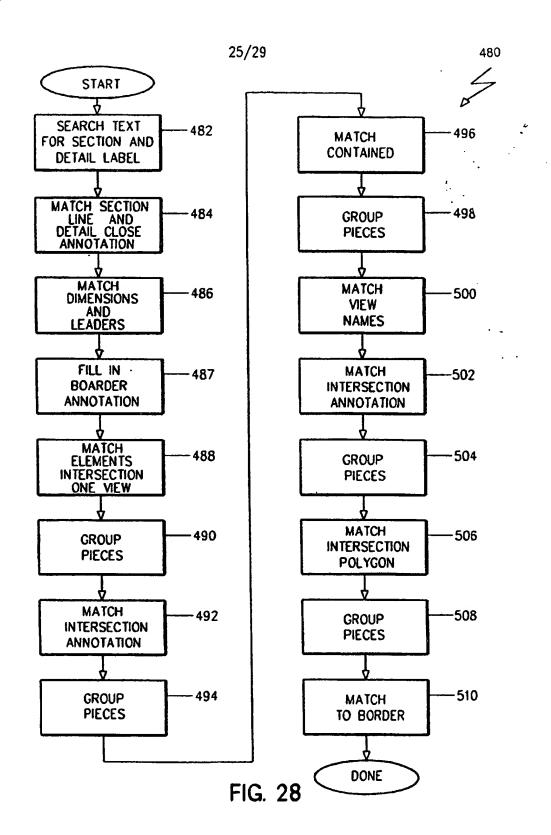


FIG. 27



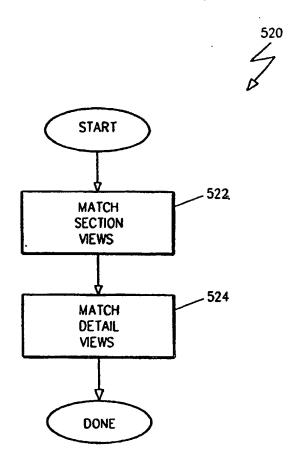


FIG. 29

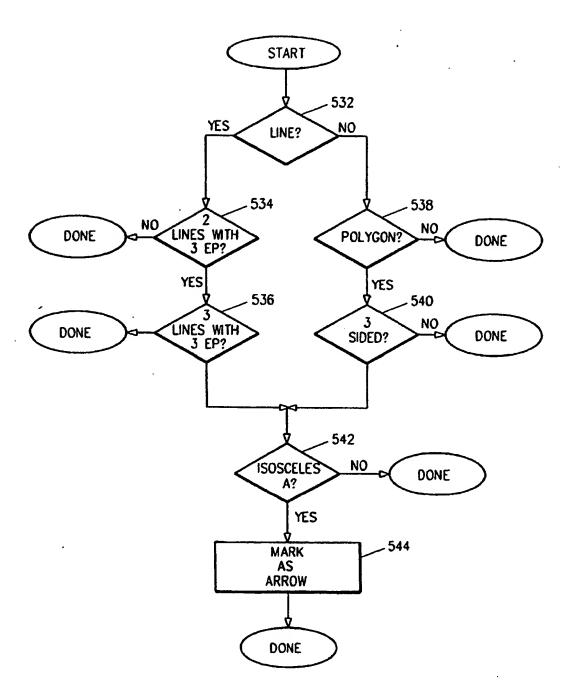


FIG. 30

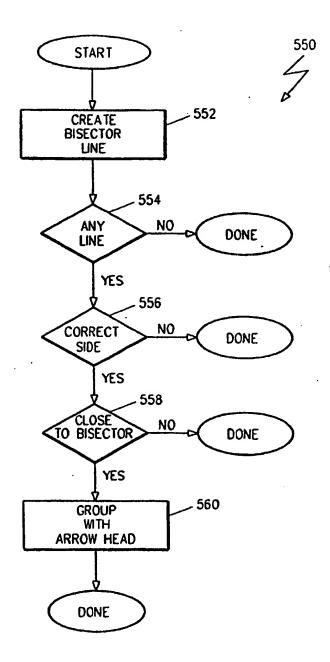


FIG. 31

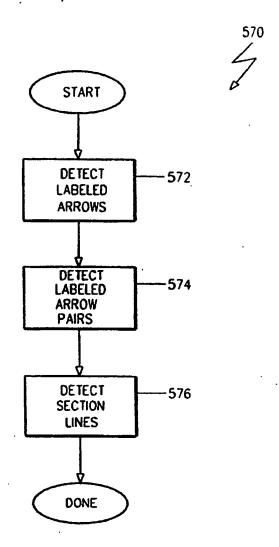


FIG. 32